


English Guide


Part Names

- The illustrations below are those of LC-22K9. LC-24K9 has the same layout of jacks and terminals as LC-22K9.


Front view

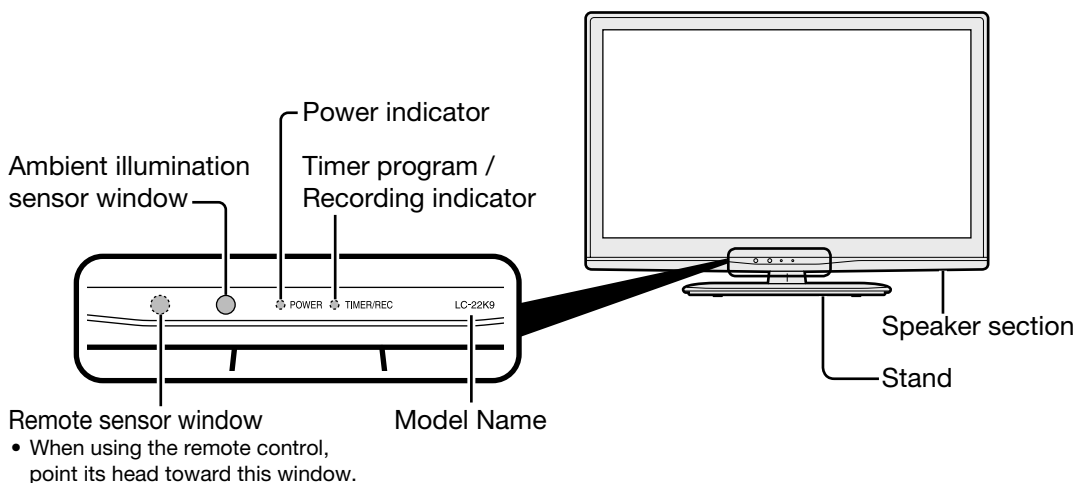

Left side view

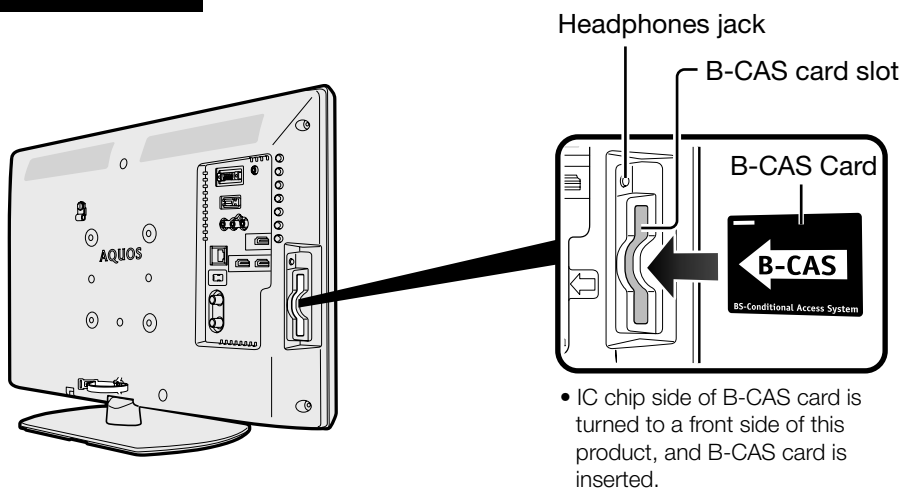

Back view

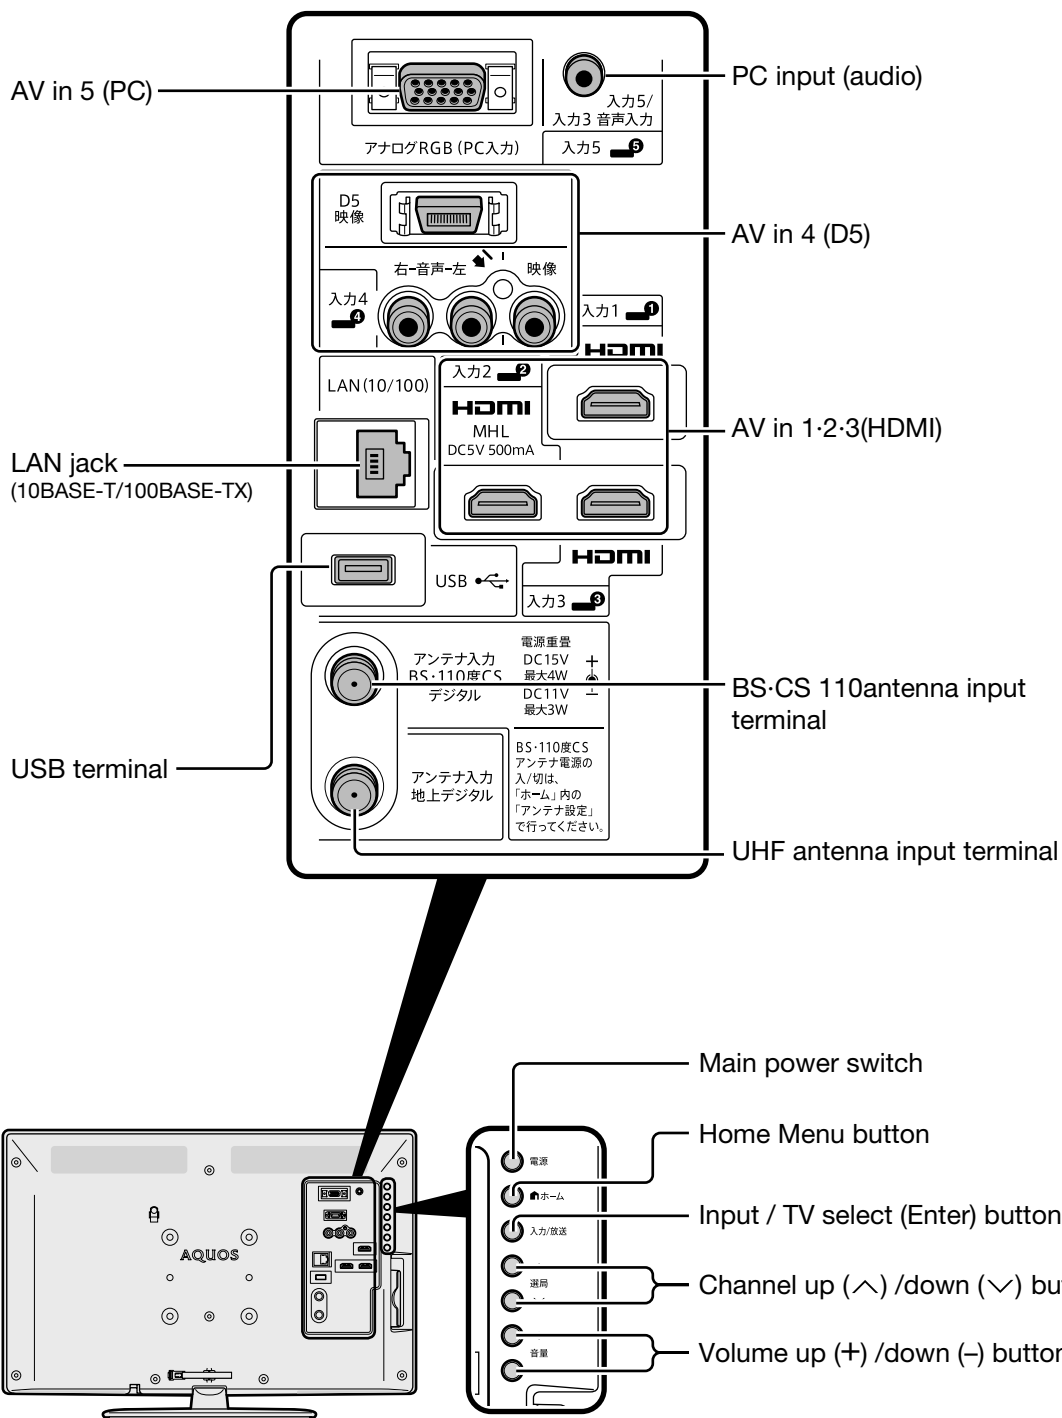

もくし／ご注意／
各部のなまえ

ふだんの
使いかた

メニュー
操作

USBメモリ
双方向通信

USB
ハードディスク

ファミリンクで使う／
レコーダーやパソコンをつなぐ

個別設定／
放送の種類について

故障かな？／
エラーメッセージ

お役立ち情報
(仕様や素子)

English
Guide

Remote Control Unit

AV position (Changing Pic. Quality) select

- Press to select the picture/sound setting that best matches the current program.

Active/Standby

- Press to engage the TV set in the active or standby mode.

Clock

- Press to display a large clock on the screen while watching.

Channel select

- Press to select a channel.
- Use to input a number for various settings.

Terrestrial digital/BS/CS

- Select the CS digital channel for the first time.

Linked data broadcast

Volume up (+)/down (-)

- Press to adjust the volume.

Mute

- Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

EPG

- Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.
- Select a future program in EPG to set a timer program.

Program info

- Press to display detailed information on the current digital program.

Cursor (up, down, left, right) / Enter/Confirm

Finish

- Press to finish menu operation, etc.
- * This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

2画面



Split screen

- Press to switch between the split screen mode and the normal screen mode.

操作切換



Operable screen

- Press to switch the operable screen when the TV set is in the split screen mode.

Timer

- Press to set timer.

SAVE mode

Freeze

Display

Recording list

- Press to display a list of programs recorded onto a USB HDD or AQUOS recorder.

Familink

- Press to operate "Familink" Recorders connected via HDMI cables.

Channel up (^)/down (v)

- Press to select channels in the ascending or descending order.

Input select

Display the "Home" Menu

Display the Tool Menu

Return

Color

- Use to operate EPGs and data program screens.

オフタイマー



Sleep timer

音声切換




Audio select

Recording/Playback operation

- Recording operation**
Press to record onto USB HDD or AQUOS recorder.

Playback operation

- Press to play a program recorded onto a USB HDD or AQUOS recorder.

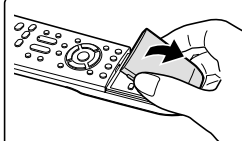


To open the cover

Hold the cover by the projections on both sides and lift upwards.

Switching the Display Language to English ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.

ホームメニューなどの画面表示を英語にすることができます。

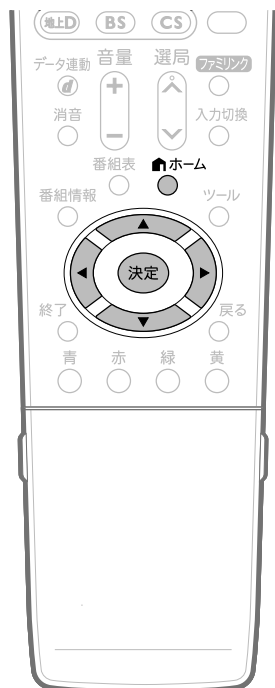

1

Press
ホーム
and
select
with

Select “設定” (Setup) on the Home menu.

ホームメニューから「設定」を選ぶ



2

Select
with

Select “ (視聴準備)” (View Setting).

「 (視聴準備)」を選ぶ



3

Select
with
Press

Select “Language(言語)”.
「Language(言語)」を選ぶ



4

Select
with
Press

Select “English”.
「English」を選ぶ

Enter.
決定する



- The menu screen is now displayed in English.
- 画面表示が英語になります。

5

Press
ホーム

Finish this operation.
終了する

◇おしらせ◇
誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」－「 (View Setting)」－「言語(Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

もくじ／ご注意
各部のなまえ

使いた
ふだんの
かた

メ
ン
ー
操
作

双
方
向
通
信
／
USBメモリー

USB
ハードディスク

ファ
ミ
リ
ン
ク
で
使
う
／
レコーダーやパソコンをつなぐ

個
別
設
定
／
放送の種類について

故
障
か
な
？
／
エラーメッセージ

お
役
立
ち
情
報
（
仕
様
や
索
引
）

English
Guide